

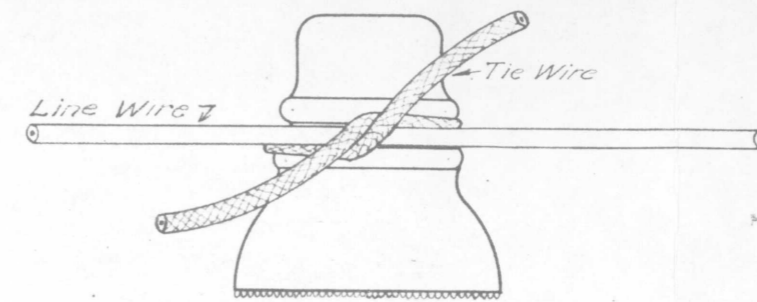



NOTE
Cable to take one turn around pole before distribution and be secured to pole with leather straps. Also fasten cable to pole with leather straps between cross arm and dead end.

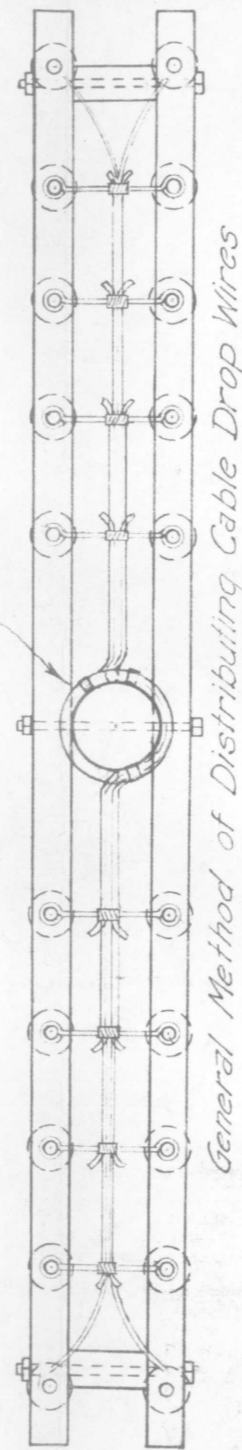

First position of tie wire.

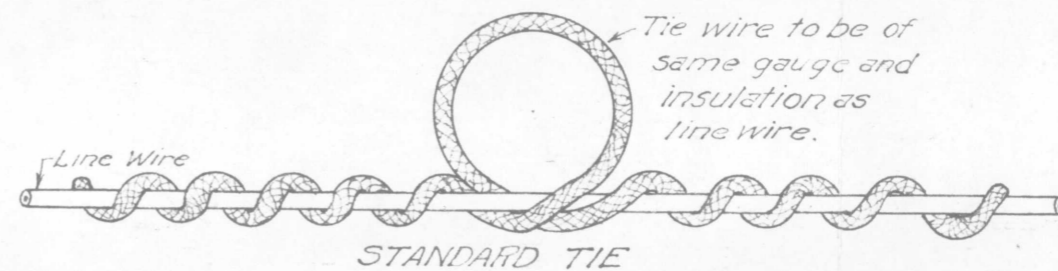

Standard way of tying copper clad iron wire to line insulator.

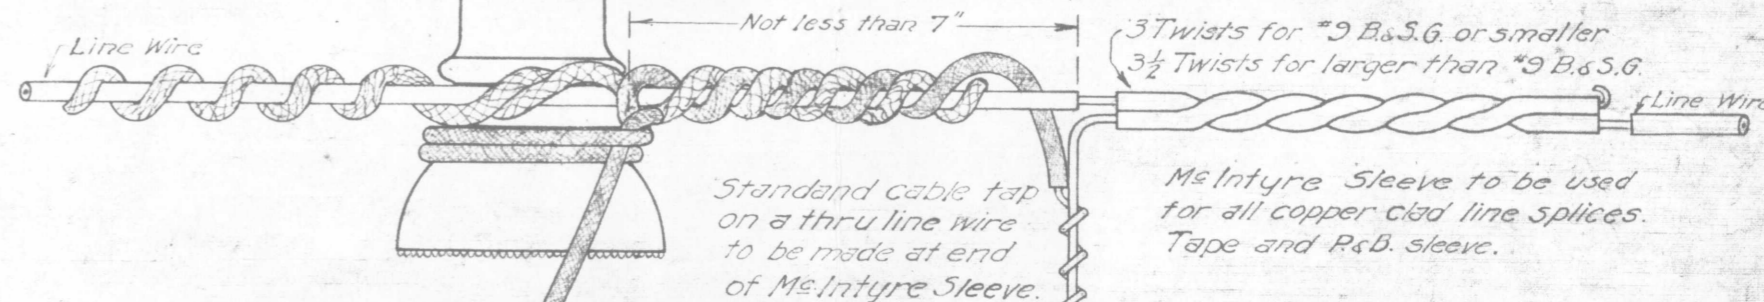

STANDARD CABLE TAP ON THRU LINE WIRE

G. N. RY.
PLAN OF STANDARD
LINE WIRE TIE, DEAD ENDS
AND CABLE TAP CONNECTIONS

OFFICE OF SIGNAL ENGINEER ST. PAUL, MINN.

NO SCALE

JUNE 1922

B
Revised

DRAWN BY [Signature]
CHECKED BY [Signature]
APPROVED BY [Signature]
SIGNAL ENGR.
6-16-22
167-88